

GAME BOY ADVANCE SP BLADE SIGN WAL-MART ASSEMBLY INSTRUCTION



CONTENTS:

- (1) LIT BLADE SIGN WITH GAME BOY ADVANCE SP**
- (1) MOUNTING BRACKET**
- (3) 1/4 - 20 X 5/8 PIN - IN HEX BUTTON HEAD SCREW**
- (1) RUBBER BUSHING**
- (6) WIRE MANAGEMENT CLIPS**
- (1) SILVER CORD COVER**
- (2) 10 - 24 X 3/8" SET SCREWS**
- (1) 3/32" HEX KEY FOR SET SCREWS**
- (1) 6 OUTLET SURGE PROTECTOR**
- (1) 10 ' AC ADAPTER FOR LIGHT**
- (1) POWER CORD & EXTENSION FOR GAME BOY ADVANCE SP**

- 1) ALIGN BRACKET WITH 3 SLOTS ON THE INSIDE OF THE DISPLAY CASE BLADE PARTITION. (FIG. 1)

BRACKET



INSTALLATION TIP:

INSERT THE SCREW FIRST THROUGH THE SLOT ON THE BLADE PARTITION. DO NOT TIGHTEN COMPLETELY UNTIL ALL SCREWS ARE PARTIALLY THREADED.

FIG. 1

- 2) INSERT & TIGHTEN (3) SECURITY SCREWS WITH 5/32" SECURITY ALLEN WRENCH. (FIG. 2)

SCREW



FIG. 2


INSTALLATION INSTRUCTION

3) ROUTE THE POWER CORDS FOR BOTH THE GAME BOY ADVANCE SP & THE LIT BLADE SIGN DOWN FROM THE OVERHEAD VALANCE THROUGH THE NOTCH IN THE DISPLAY CASE. USE SUPPLIED CABLE CLIPS TO KEEP CORDS NEAT AND OUT OF THE WAY. NEXT, ROUTE BOTH CABLES THROUGH THE RUBBER BUSHING IN THE MOUNTING BRACKET AND DOWN THE BACK TRACK OF THE DISPLAY.

4) REMOVE BOTH GRAPHIC WINGS (FOR WAL-MART STORES) BY PRESSING & HOLDING THE TAB ON THE REAR OF THE CRADLE ASSEMBLY AND PULLING OUT THE WING. (FIG. 4)


**TAB****FIG. 4**

5) SLIDE THE DISPLAY (FROM THE TOP) ONTO BRACKET BY SLIPPING THE TRACK ON THE BACK OF THE DISPLAY OVER TWO HINGE PLATES. POSITION THE BOTTOM OF THE BLADE 28" FROM THE GROUND. (FIG. 5)

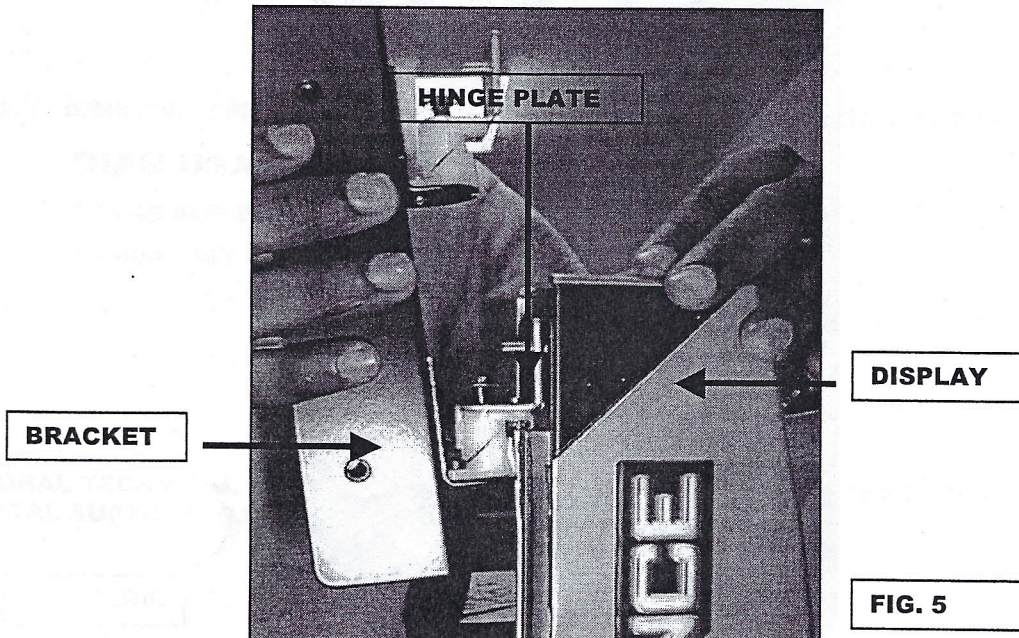**DISPLAY****BRACKET****HINGE PLATE****FIG. 5**

INSTALLATION INSTRUCTION

6) TIGHTEN HINGE PLATES WITH A 3/32" ALLEN WRENCH (SUPPLIED). (FIG. 6)

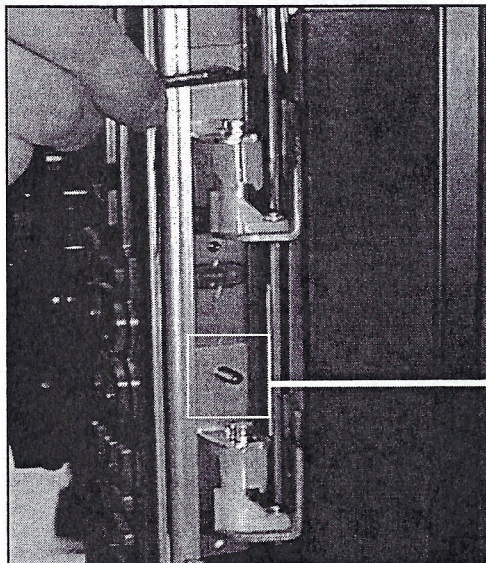

TIGHTEN HINGE PLATES



FIG. 6

7) CONNECT THE GAME BOY ADVANCE SP POWER INTO THE RECEPTACLE APPROX . 1 1/2" FROM THE BOTTOM OF THE DISPLAY. CONNECT THE POWER FOR THE LIT SIGN INTO THE RECESSED, ROUND RECEPTACLE AT THE VERY BOTTOM OF THE DISPLAY.



FIG. 7

8) CUT THE SILVER CORD COVER WITH SCISSORS TO THE LENGTH NEEDED TO COVER EXPOSED CABLES & CONNECTORS ON THE BACK TRACK OF THE DISPLAY. PINCH & SLIDE THE SILVER CORD COVER INTO THE TRACK AND OVER ALL CABLES & CONNECTORS. PLUG IN BOTH AC ADAPTORS AT THE TOP OF THE SHOWCASE. (FIG . 8)



SILVER CORD COVER

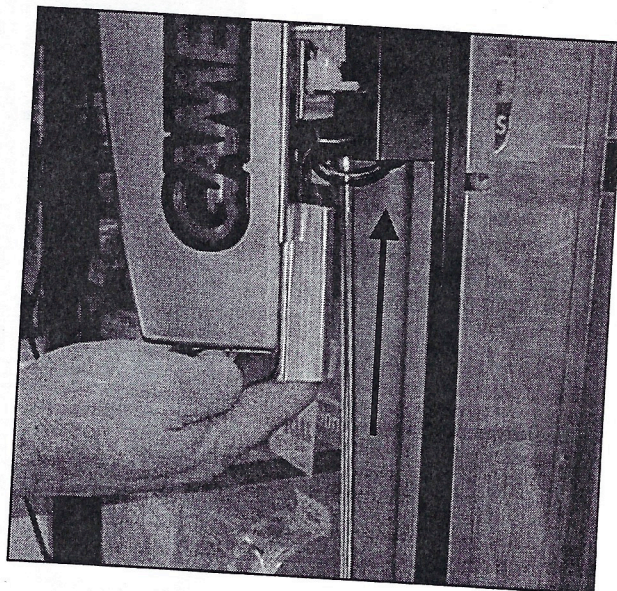


FIG. 8

FOR QUESTIONS OR ASSISTANCE WITH THIS DISPLAY OR INSTALLATION, PLEASE CONTACT

DIAM USA

26 - 45 BQE WEST, WOODSIDE, NY 11377

1 - 800 - 643 - 4377

ADDITIONAL TECHNICAL SUPPORT CAN BE OBTAINED THROUGH NINTENDO DISPLAY ONLINE
TECHNICAL SUPPORT (D.O.T.S.) AT 1 - 800 - 875 - 1852 (PRESS 2)